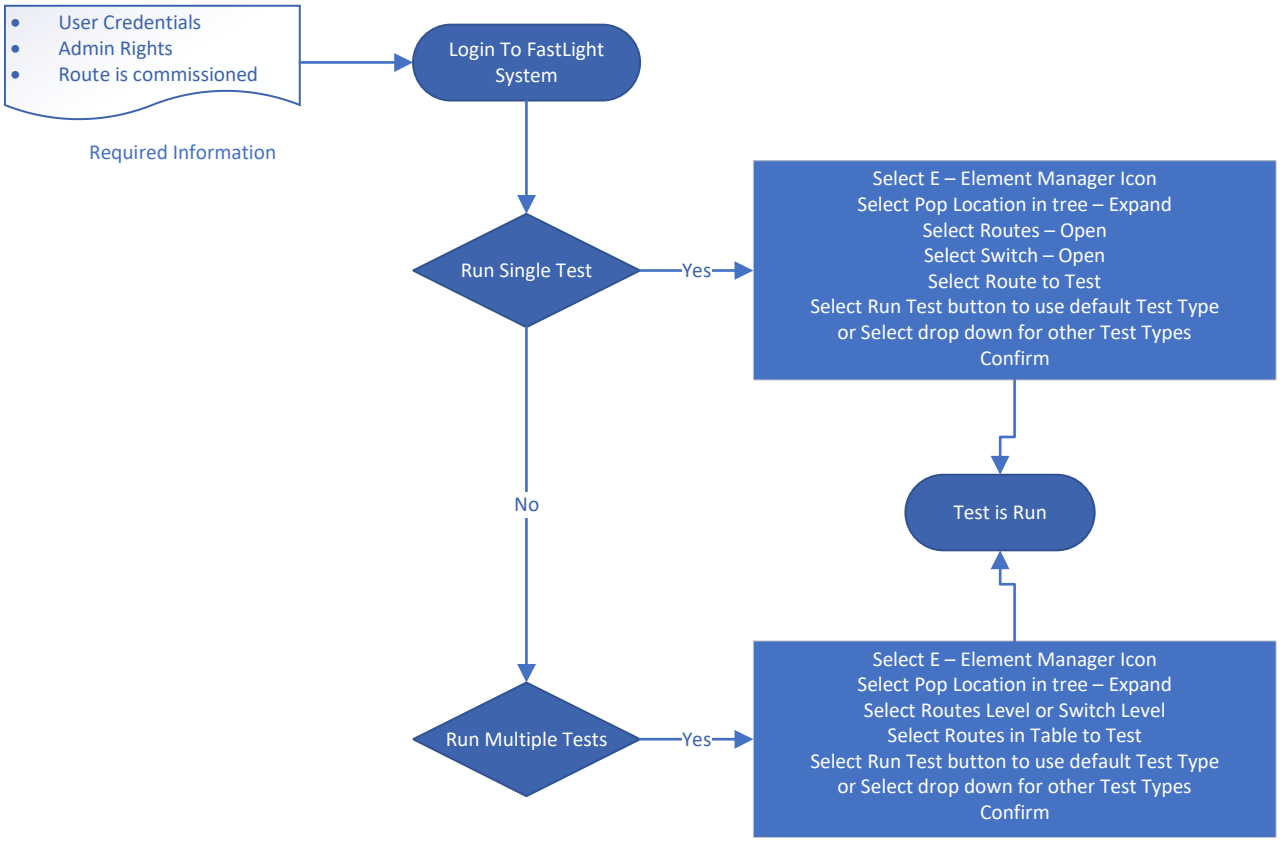
User Credentials
Admin Rights
Route is commissioned
Required Information
Login To FastLight System
Run Single Test
Yes
Select E – Element Manager Icon
Select Pop Location in tree – Expand
Select Routes – Open
Select Switch – Open
Select Route to Test
Select Run Test button to use default Test Type
or Select drop down for other Test Types
Confirm
Test is Run
No
Run Multiple Tests
Yes
Select E – Element Manager Icon
Select Pop Location in tree – Expand
Select Routes Level or Switch Level
Select Routes in Table to Test
Select Run Test button to use default Test Type
or Select drop down for other Test Types
Confirm

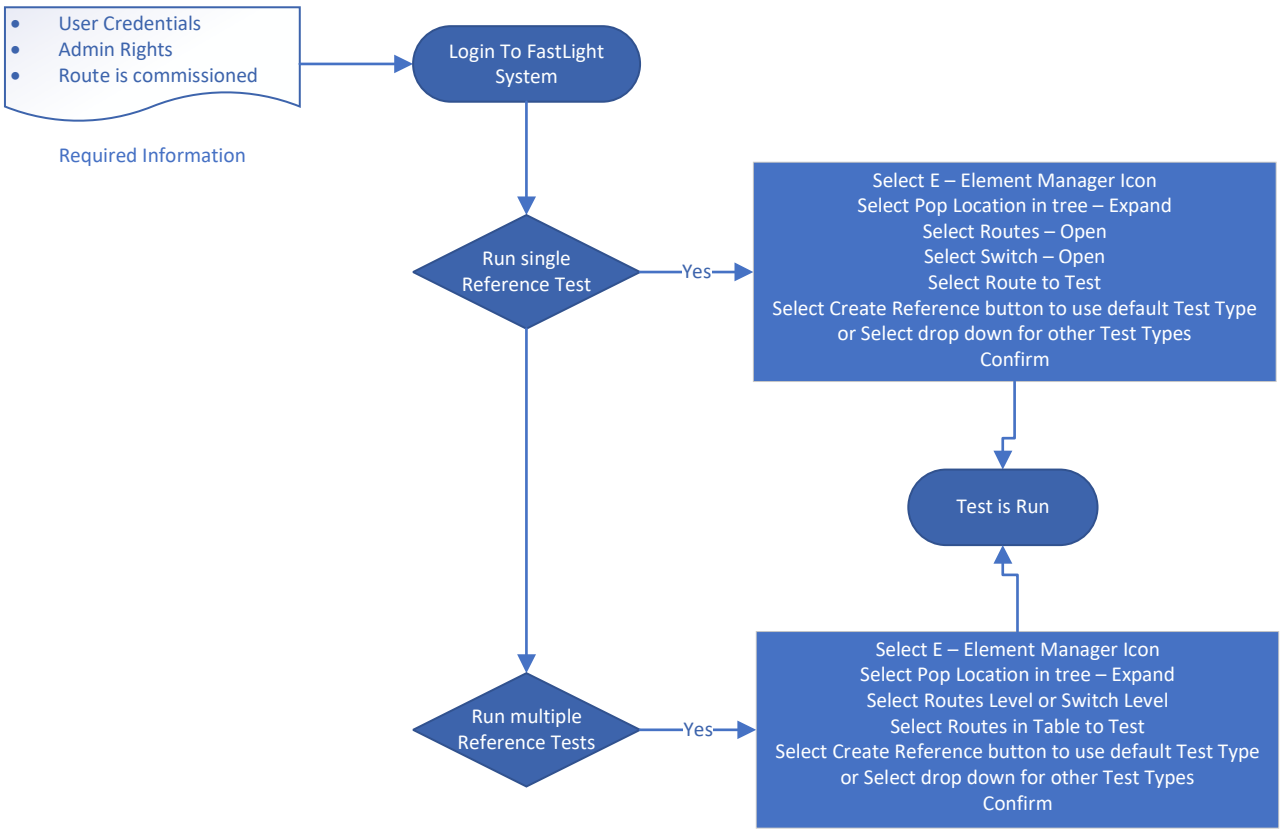
User Credentials
Admin Rights
Route is commissioned
Required Information
Login To FastLight System
Run single Reference Test
Yes
Select E – Element Manager Icon
Select Pop Location in tree – Expand
Select Routes – Open
Select Switch – Open
Select Route to Test
Select Create Reference button to use default Test Type
or Select drop down for other Test Types
Confirm
Test is Run
Run multiple Reference Tests
Yes
Select E – Element Manager Icon
Select Pop Location in tree – Expand
Select Routes Level or Switch Level
Select Routes in Table to Test
Select Create Reference button to use default Test Type
or Select drop down for other Test Types
Confirm